


Instruction for installation and maintenance GRAF Optimax-Pro Filter internal

Optimax-Pro Filter internal DN100
Order No. 340037

Carat Filter Package 3 –
Optimax-Pro Filter internal DN100
Order No. 342005

Optimax XL Filter internal DN150
Order No. 340108

Carat Platin XL/XXL Filter Pack-
age 3 - Optimax XL Filter
internal DN150
Order No. 342042

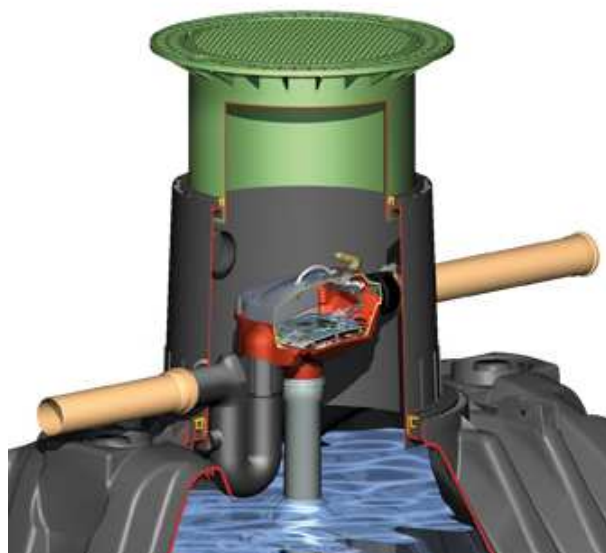

The points described in these instructions must be observed under all circumstances. All warranty rights are invalidated in the event of non-observance. Separate installation instructions are enclosed in the transportation packaging for all additional articles purchased from GRAF.

The components must be checked for any damage prior to installation under all circumstances.

Missing instructions can be downloaded on www.graf.info or can be requested from GRAF.

Table of contents

1. GENERAL NOTES	2
1.1 Safety	2
2. INSTALLATION CONDITIONS	2
2.1 Optimax-Pro Filter internal - Connection DN 100	2
2.2 Optimax XL Filter internal - Connection DN 150	2
3. TECHNICAL DATA	3
3.1 Optimax-Pro Filter internal (DN 100)	3
3. TECHNICAL DATA	4
3.2 Optimax XL Filter internal (DN 150)	4
4. ASSEMBLY	5
4.1 Optimax-Pro Filter internal (DN 100)	5
4.2 Optimax XL Filter internal (DN 150)	5
5. INSTALLATION AND ASSEMBLY	6
5.1 Overview	6
5.2 Installation of inflow pipe and overflow siphon	7
5.3 Preparation filter for installation	7
5.4 Insert the filter into the tank	8

1. General notes

1.1 Safety

The relevant accident prevention regulations according to BGV C22 must be observed during all work. Particularly when walking on the tanks, a 2nd person is required to secure the tank.

The relevant regulations and standards must additionally be taken into consideration during installation, assembly, servicing, repair, etc. Relevant notes can be found in the corresponding sections of these instructions.

During all work on the system or parts of the system, the entire system must always be rendered inoperable and secured to prevent unauthorised reactivation.

GRAF offers an extensive range of accessories, all of which are designed to match each other and which can be extended to form complete systems. The use of accessories that have not been approved by GRAF results in the exclusion of the warranty/guarantee.

2. Installation conditions

2.1 Optimax-Pro Filter internal - Connection DN 100


- The Optimax-Pro Filter internal is suitable for installation in a manhole or a underground tank.
- The difference of level between inflow and outflow is 165 mm.
- The filter is suitable for roof areas up to 350 m².
- The mesh width of the sieve insert is 0.35 mm.

2.2 Optimax XL Filter internal - Connection DN 150

- The Optimax XL Filter internal is suitable for installation in a manhole or a underground tank.
- The difference of level between inflow and outflow is 165 mm.
- The filter is suitable for roof areas up to 750 m².
- The mesh width of the sieve insert is 0.35 mm.


3. Technical data

3.1 Optimax-Pro Filter internal (DN 100)

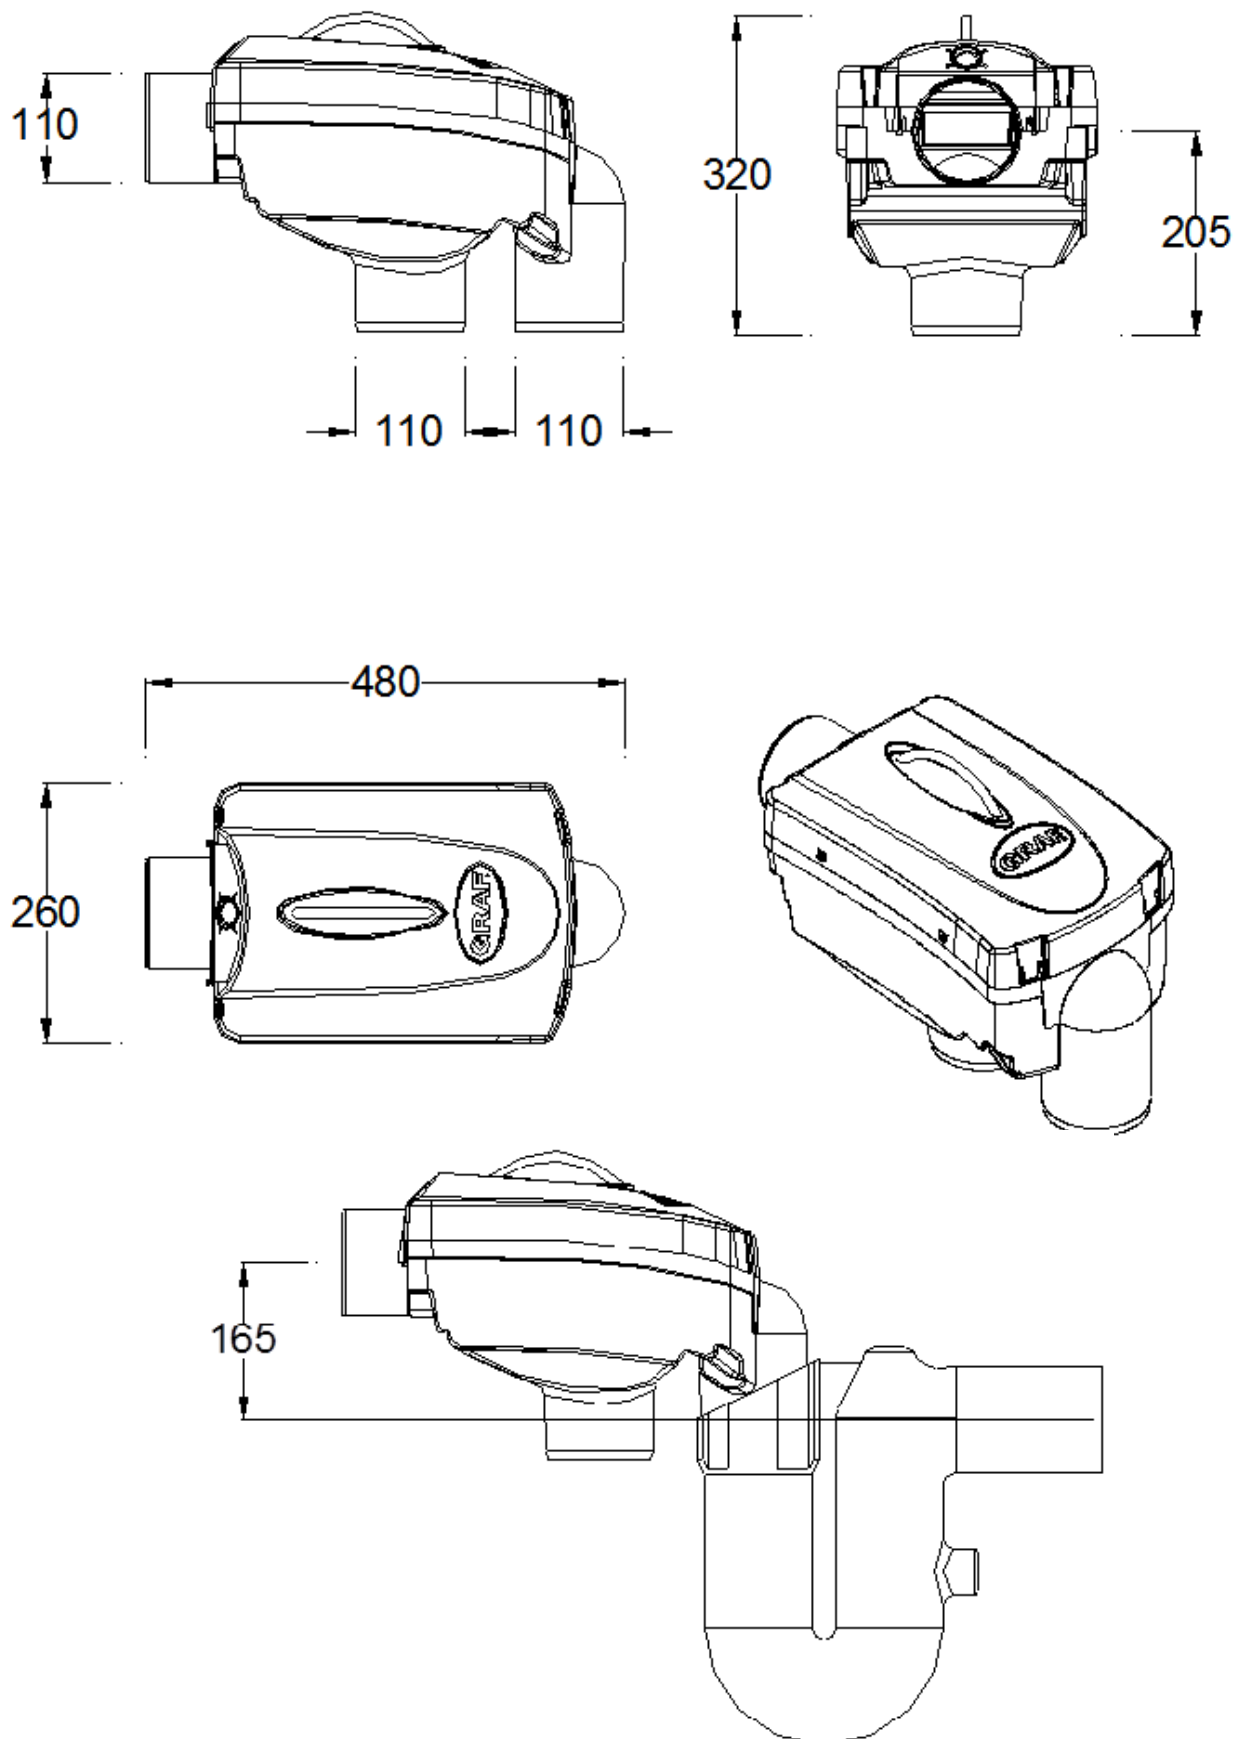

3. Technical data

3.2 Optimax XL Filter internal (DN 150)

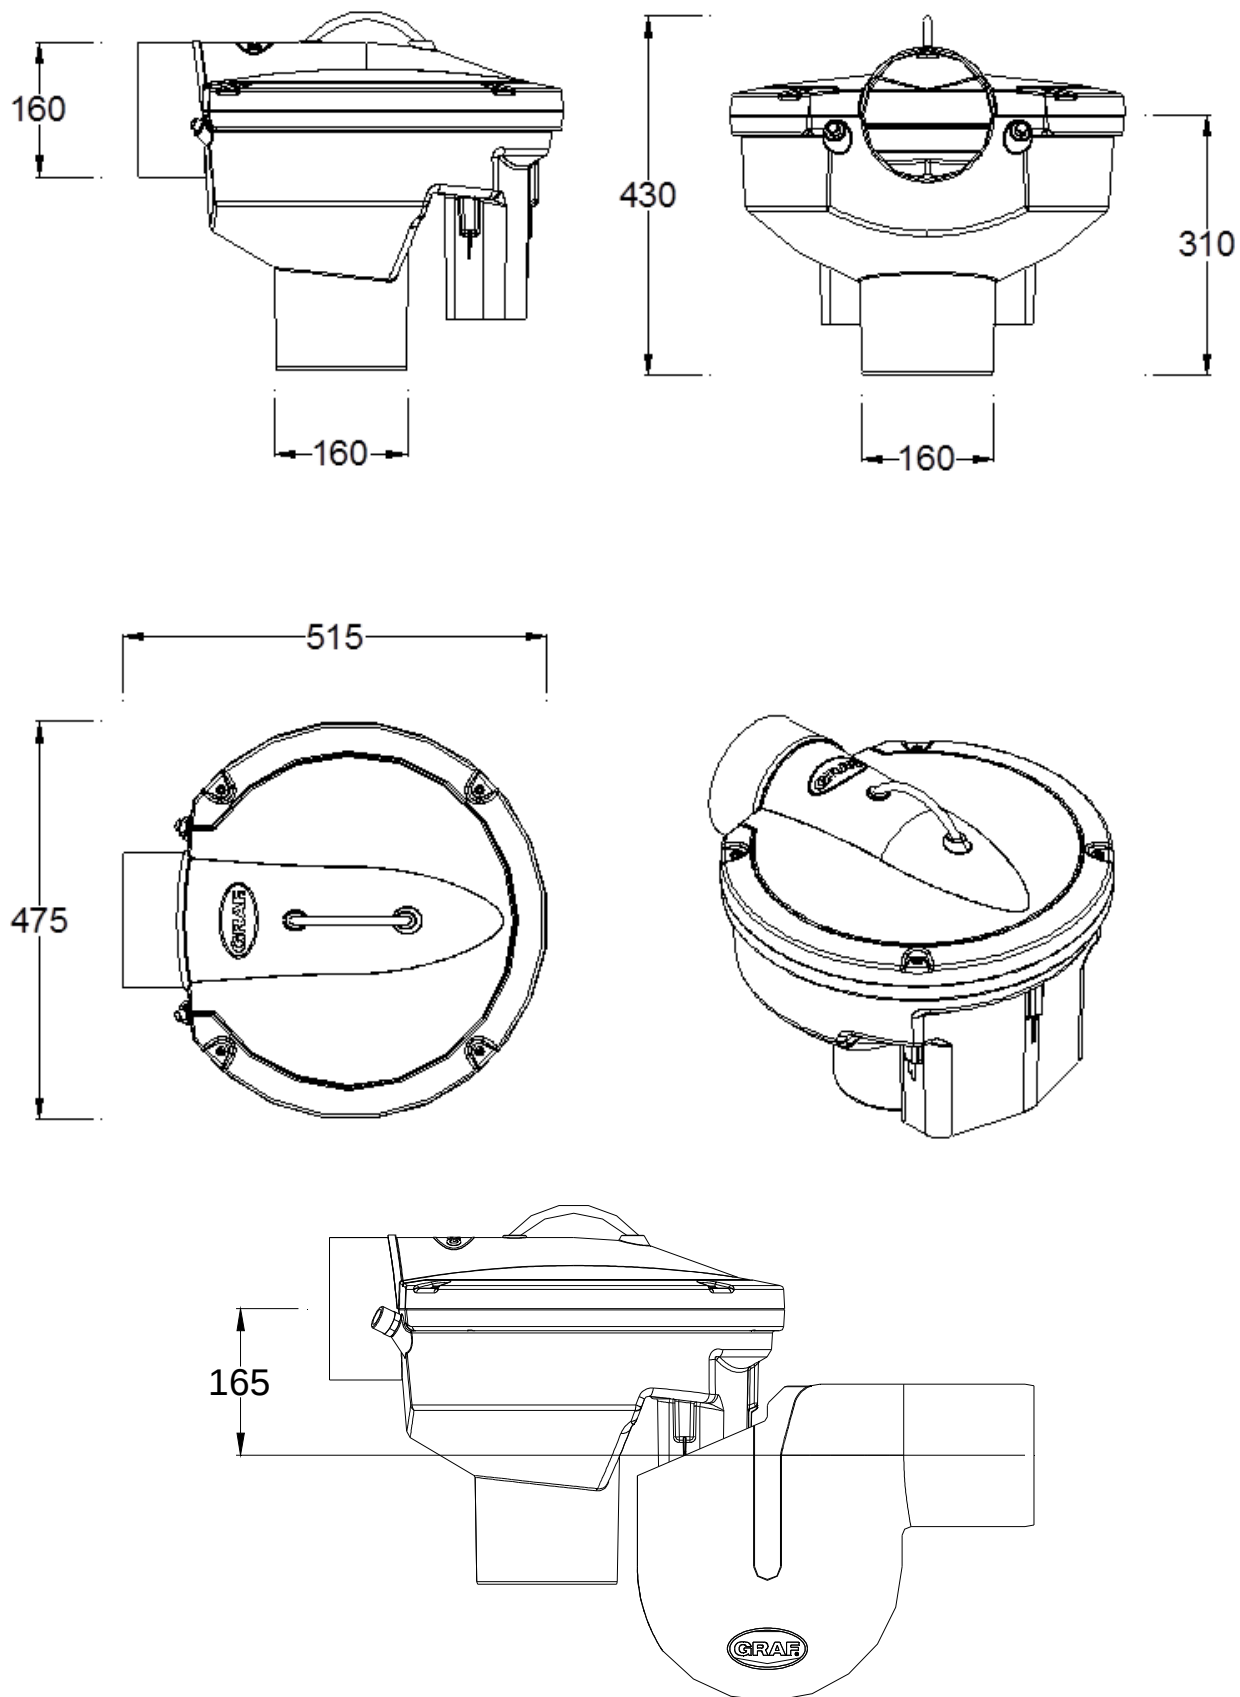


4. Assembly

4.1 Optimax-Pro Filter internal (DN 100)

① Clear transparent cover/ filter inset

② Filter body including nozzle holder

③ Support for Opticlean (340040)

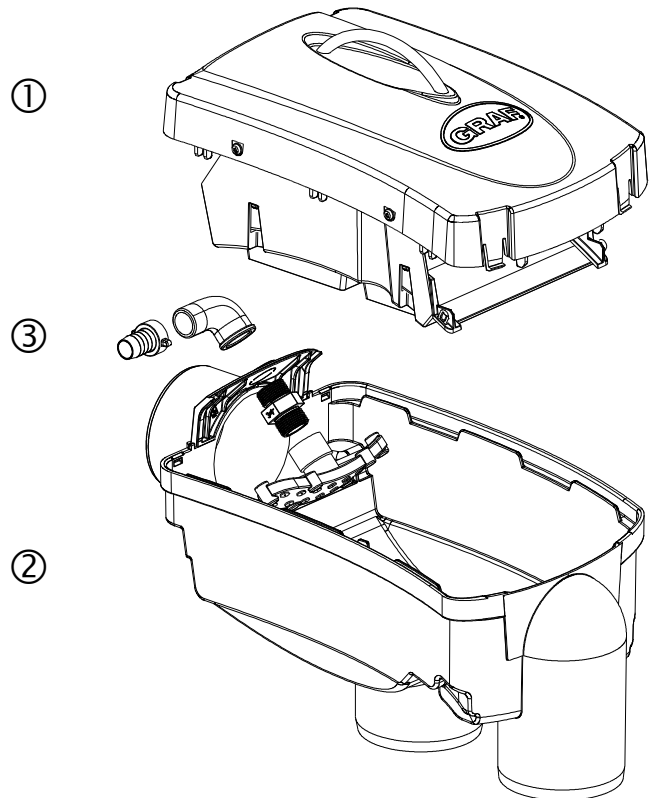


4.2 Optimax XL Filter internal (DN 150)

① Clear transparent cover/ filter inset


② Filter body

③ Support for Opticlean XL (340117)

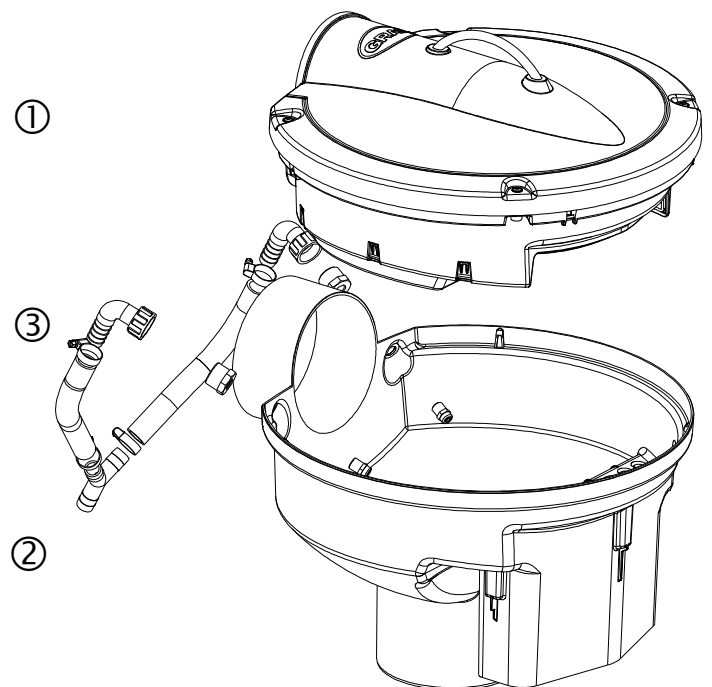


5. Installation and assembly

5.1 Overview

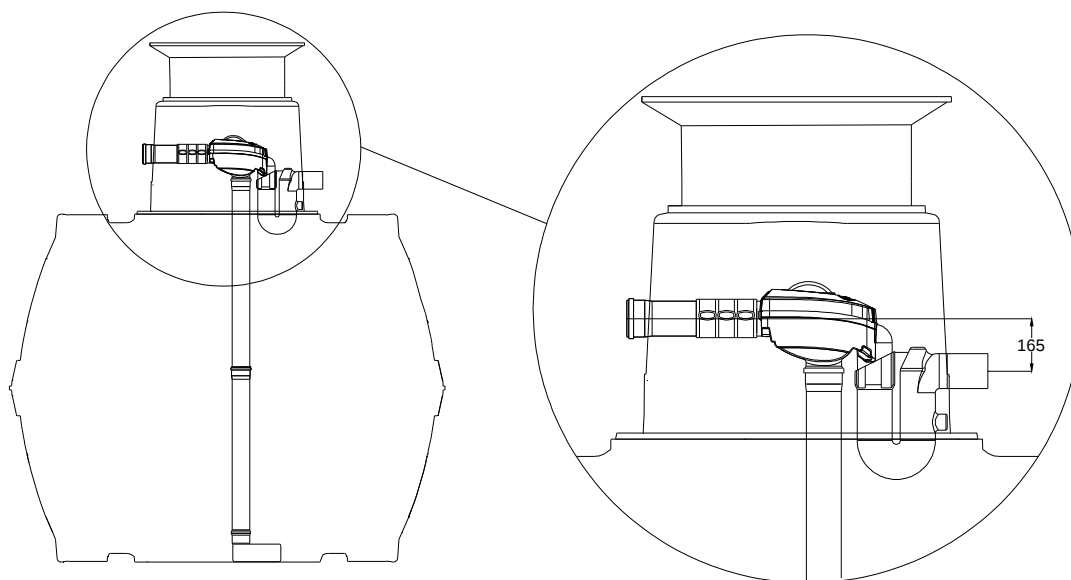

5. Installation and assembly

5.2 Installation of inflow pipe and overflow siphon

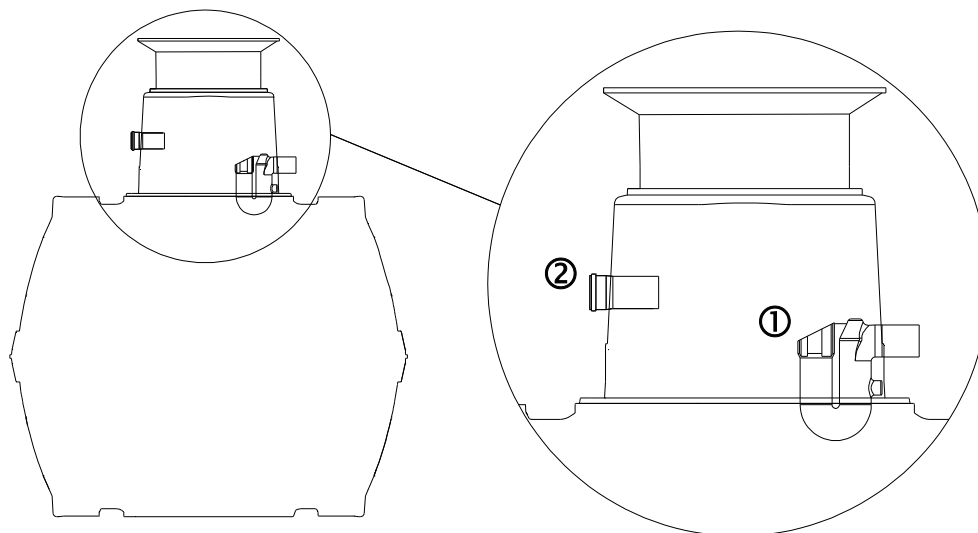

- ① Insert the overflow siphon in the lower seal till block.
- ② Insert the inflow pipe from outside.

5.3 Preparation filter for installation


Connect the filter body ① with a PVC pipe DN 100/150 ② (on site) with the inflow pot (calmed down) ③ (contained in filter package 3).

Fix all junctions with screws (against shift of pipes).

Carat Platin volume (liter)	Optimax-Pro Filter internal Connection DN 100*	Optimax XL Filter internal Connection DN 150*
2.700	1320 mm	1275 mm
3.750	1500 mm	1455 mm
4.800	1730 mm	1685 mm
6.500	2020 mm	1975 mm
8.500	2003 mm	1958 mm
10.000	2203 mm/ 1246 mm**	2158/ 1237 mm**
from 16.000	2463 mm	2418 mm


* (+ / - 10 mm)

** It is valid for all Platin XL/XXL tank sizes

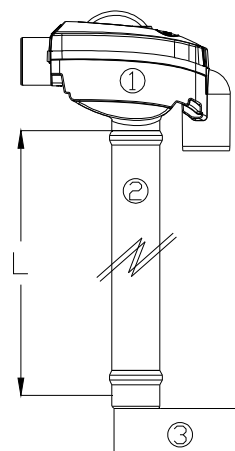

5. Installation and assembly

5.4 Insert the filter into the tank

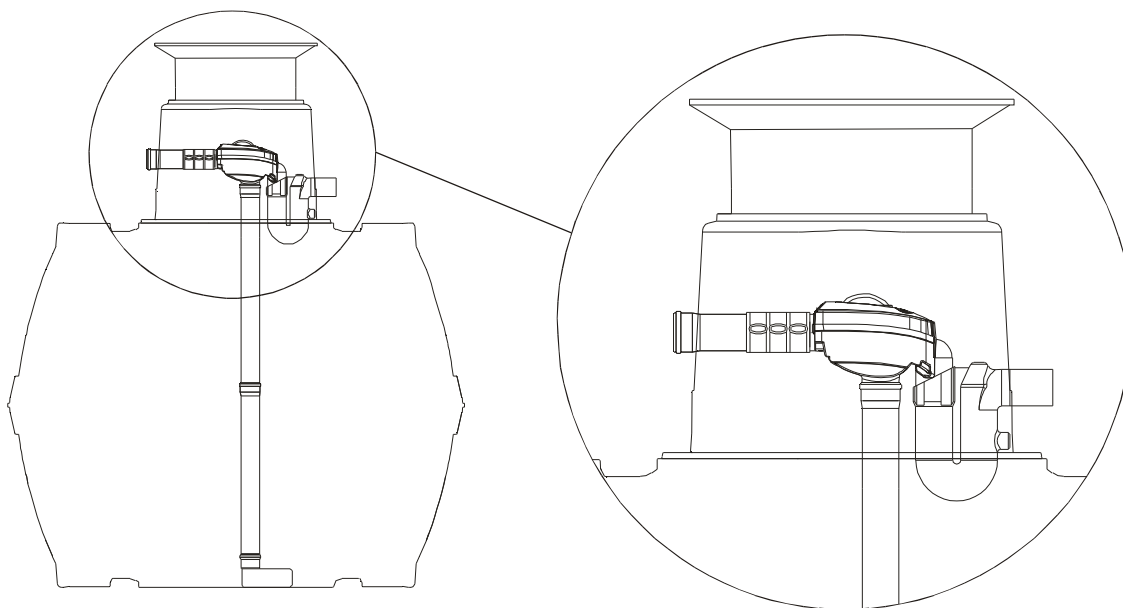


Insert the filter, prepared with the inflow pot (calmed down), in the tank.

Telescope the overflow from top into the siphon and fix the filter inflow with the spannfix collar (contained in filter package 3).

6. Accessory

Handle Plus for Optimax – Pro Filter
Order No. 330220

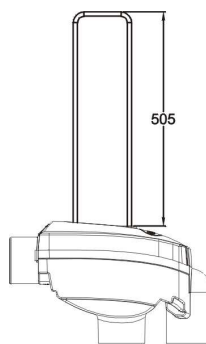

7. Maintenance

Depending on the dirtiness of the roof surface water the sieve has to be cleaned several times a year. Remove the transparent cover from the filter body. The sieve and the cover is one unit. Removing and cleaning is unproblematic.